

Datasheet

Parameters

Electrical Parameters:	
Working power	DC15~30V
Static power consumption	15mA/DC24V
Dynamic power consumption	40mA/DC24V
Output channel	12CH/10A
Relay	16A Magnetic latching relay
Max current in each channel	10A
Electronic life time of relay	>60000 (Resistance Load)
Protection	Connect a breaker in each channel

Environmental Conditions:	
Working temperature	-5°C~45°C
Working relative humidity	Up to 90%
Storage temperature	-20°C~+60°C
Storage relative humidity	Up to 93%

Approved

CE

RoHS

Product Information:	
Dimensions	216×90×66 (mm)
Weight	645.5(g)
Housing material	Nylon, PC
Installation	35mm DIN rail installation
Protection degree	IP20
Installation position	Distribution box (DB)

Installation Steps

- 35mm DIN rail installation, inside DB box.
- Mark up for each output connection cable.
- Connect the load and HDL Buspro cable.
- Check if there is any short circuit in output connection cable.
- Check the HDL Buspro connection, avoid any mistake.
- Isolate the high power and low power.
- Tighten the screw again for all of terminal.
- Recommended Load type and Power

econfinenced Load type and I ower		
Motors:	1H (1HP=746W)	
Incandescent lamp load:	1600 W	
Inductive transformer :	1000 W	
Electronic transformer:	800 W	
Halogen lamp 230 V	1600 W	
Mercury-vapour lamp		
* Uncompensated luminaire:	1000 W	
* Parallel compensated :	800 W	
Fluorescent lamp T5 / T8		
* Uncompensated luminaire:	1000 W	

* Parallel compensated : 800 W
* DUO lamp : 800 W

Dulux lamp

* Uncompensated luminaire: 1000 W *Parallel compensated : 800 W

Overview



HDL-MR1210.433 Intelligent Relay Module, has 16A magnetic launching relay inside, zero power consumption and high reliability. The communication interface is HDL Buspro Pro, which is based on RS485 protocol.

Functions

- 12-channel relay output unit.
- Scene controller function available.
- Up to 12 separate areas.
- Each area has 24 scenes with maximum running time of 60 minutes
- Each channel has light protection delay (0-60 minutes).
- Each channel has batch turn-on delay (0-25 seconds).
- Each channel has manual control for relay unit
- You can select specified scene or scene before power off when the device restarts.
- Supports easy programming and HDL Buspro online upgrading.
- Communication: HDL Buspro.

Important Notes


- Buspro cable HDL Buspro/KNX cable, 0.8mm singlecore copper cable.
- Buspro Connection Series connection (hand –in-hand).
- Output channel The following list is the recommended load for output channel. To protect the relay, please connect a 10A breaker for each channel.


HDL Buspro Cable Guide


HDL Buspro	HDL Buspro/KNX
DC24V	Red
COM	Black
DATA-	White
DATA+	Yellow



Dimensions and Wiring

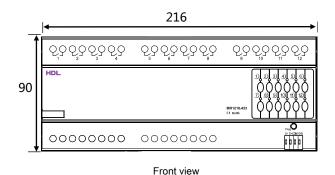

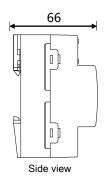

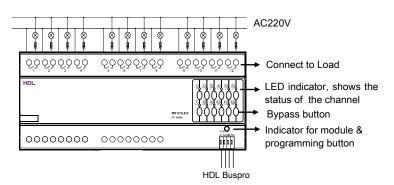

Indicator for module: Flickers when the module is working properly. Keep pressing the indicator for 3 seconds, it will turn to red, then user can read and modify the address of the module in the HDL Buspro Pro setting software.

Steps for easy programming mode:

- 1. Press the programming button for about 10s, all output channel will be turned off automatically, the indicator will flicker fast
- 2. Now the panel shows "programming", then press Button 9, 10 of DLP switch together, the panel will display "external program-
- 3. Keep pressing the indicator for 2s, it will change the load, short press the indicator will change the load's status. Note: The programming channel is from channel 1 to channel 12, and then it will go back to the channel 1. If you want to set multiple channels, the panel must be set to "Combination mode".
- 4. Choose a button which is used to control the channel. Keep pressing the button, it will cover the original targets, short press the button, it will add the relay loads.
- 5. Keep pressing the Indicator for 10 seconds to finish the programming.

This function is to be used in conjunction with the new generation of DLP.

Safety Precautions



- The screw down torque should not exceed 0.4Nm.
- Connect a breaker or fuse with each channel.
- Current in each channel is less than 10A.
- Ensure good ventilation.
- Ensure that the Buspro interface is correctly connected to the module.
- Do not connect the module to AC power.
- Do not let the module come into contact with hazardous liquids or corrosive gases.

Package contents

Datasheet

×1

10A Relay Module (HDL-MR1210.433)

×1