

# Datasheet

## **Parameters**

Electrical Parameters:	
Working power	DC24~30V
Static power consumption	10mA/DC24V
Dynamic power consumption	35mA/DC24V
Output channel	12CH/16A
Relay	50A Magnetic latching relay
Max current in each channel	16A
Electronic life time of relay	>60000 (Resistance Load)
Protection	Connect a breaker in each channel

Environmental Conditions:	
Working temperature	-5°C~45°C
Working relative humidity	Up to 90%
Storage temperature	-20°C~+60°C
Storage relative humidity	Up to 93%

## **Approved**

CE

RoHS

Product Information:		
Dimensions	216×90×66 (mm)	
Weight	814.3(g)	
Housing material	Nylon, PC	
Installation	35mm DIN rail installation	
Protection degree	IP20	
Installation position	Distribution box (DB)	
1 ( ) ( ) ( )		

## Important Notes

- Buspro cable HDL Buspro/KNX cable, 0.8mm single-core copper cable.
- Buspro Connection Series connection (hand-in-hand).
- Output Channel The following list is the recommended load for output channel. To protect the relay, please connect a 16A breaker for each channel.
- Recommended load type and power

Motors: 4H (1HP=746W) Incandescent lamp load: 3500 W Inductive transformer: 1800 W 2000 W Electronic transformer: 3500 W Halogen lamp 220 V

Mercury vapor lamp

\* Uncompensated lamp: 2800 W \* Parallel compensated lamp: 2800 W

Fluorescent lamp T5 / T8

\* Uncompensated lamp : 3500 W \* Parallel compensated lamp : 2000 W \* DUO lamp 2000 W Dulux lamp

\* Uncompensated lamp: 1500 W \*Parallel compensated lamp: 1500 W

## **Overview**



HDL-MR1216.433 Intelligent Relay Module, has 50A launching relay, zero power consumption and high reliability. The communication interface is HDL Buspro Pro, which is based on RS485 protocol.

## **Functions**

- 12-channel relay output unit.
- Scene controller function available.
- Up to 12 separate areas. Each area has 24 scenes with maximum running time of 60 minutes.
- Each area has 2 sequences, each sequence has 12 steps.
- Each channel has light protection delay (0-60 min-
- Each channel has batch turn-on delay(0-25 seconds).
- Each channel has manual control for relay unit.
- You can select specified scene or scene before power off when the device restarts.
- Supports easy programming and HDL Buspro online upgrading.
- Communication: HDL Buspro.

# **Installation Steps**


- 35mm DIN rail Installation, inside DB box.
- Mark up for each output connection cable.
- Connect the load and HDL Buspro cable.
- Check if there is any short circuit in output connection
- Check the HDL Buspro connection, avoid any mistake.
- Isolate the high power and low power.
- Tighten the screw again for all of terminal.


## **HDL Buspro Cable Guide**


HDL Buspro	HDL Buspro/KNX
DC24V	Red
COM	Black
DATA-	White
DATA+	Yellow



## **Dimensions and Wiring**

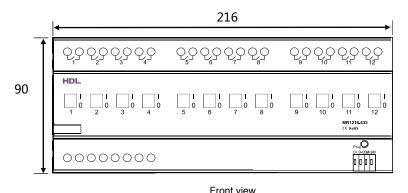

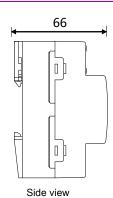

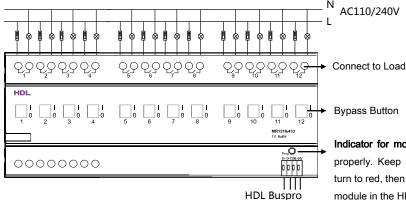

**Indicator for module:** Flickers when the module is working properly. Keep pressing the indicator for 3 seconds, it will turn to red, then user can read and modify the address of the module in the HDL Buspro Pro set up software.

#### Steps for easy programming mode:

- 1. Press the programming button for about 10s, all output channel will be turned off automatically, the indicator will flicker fast
- 2. Now the panel shows "programming", then press Button 9, 10 of DLP switch together, the panel will display "external programming".
- 3. Keep pressing the indicator for 2s, it will change the load, short press the indicator will change the load's status.

  Note: The programming channel is from channel 1 to channel 12, and then it will go back to the channel 1. If you want to set multiple channels, the panel must be set to "Combination mode".
- 4. Choose a button which is used to control the channel. Keep pressing the button, it will cover the original targets, short press the button, it will add the relay loads.
- 5. Keep pressing the Indicator for 10 seconds to finish the programming.

This function is to be used in conjunction with the new generation of DLP.

## **Safety Precautions**



- The screw down torque should not exceed 0.4Nm.
- Connect a breaker or fuse with each channel.
- Current in each channel is less than 16A.
- Ensure good ventilation.
- Ensure that the Buspro interface is correctly connected to the module.
- Do not connect the module to AC power.
- Do not let the module come into contact with hazardous liquids or corrosive gases.

## Package contents

Datasheet

×1 ×1

16A Relay Module (HDL-MR1216.433)